

SERVICE BULLETIN

STINSON DIVISION

CONSOLIDATED VULTEE AIRCRAFT CORPORATION

WAYNE, MICHIGAN

TITLE Elevators - Neutral Position

BULLETIN NO. 239


MODELS AFFECTED: 108 (Voyager 150)
108-1 through 108-495, 108-496
and up

PAGE 1 OF 1

DATE September 5, 1946

The following will further clarify the specifications as indicated on page 34 of the General Service Manual.

The elevator is in neutral position when the elevator trailing edge is in line with the contour of the horizontal stabilizer. On airplanes 108-1 through 108-495 the elevator is in neutral position when the leading edge at the balance overhang will be $5/16$ " below the leading edge of the horizontal stabilizer. On airplanes 108-496 and up this dimension should be $1/2$ ". Both correct dimensions are indicated in the sketch below.

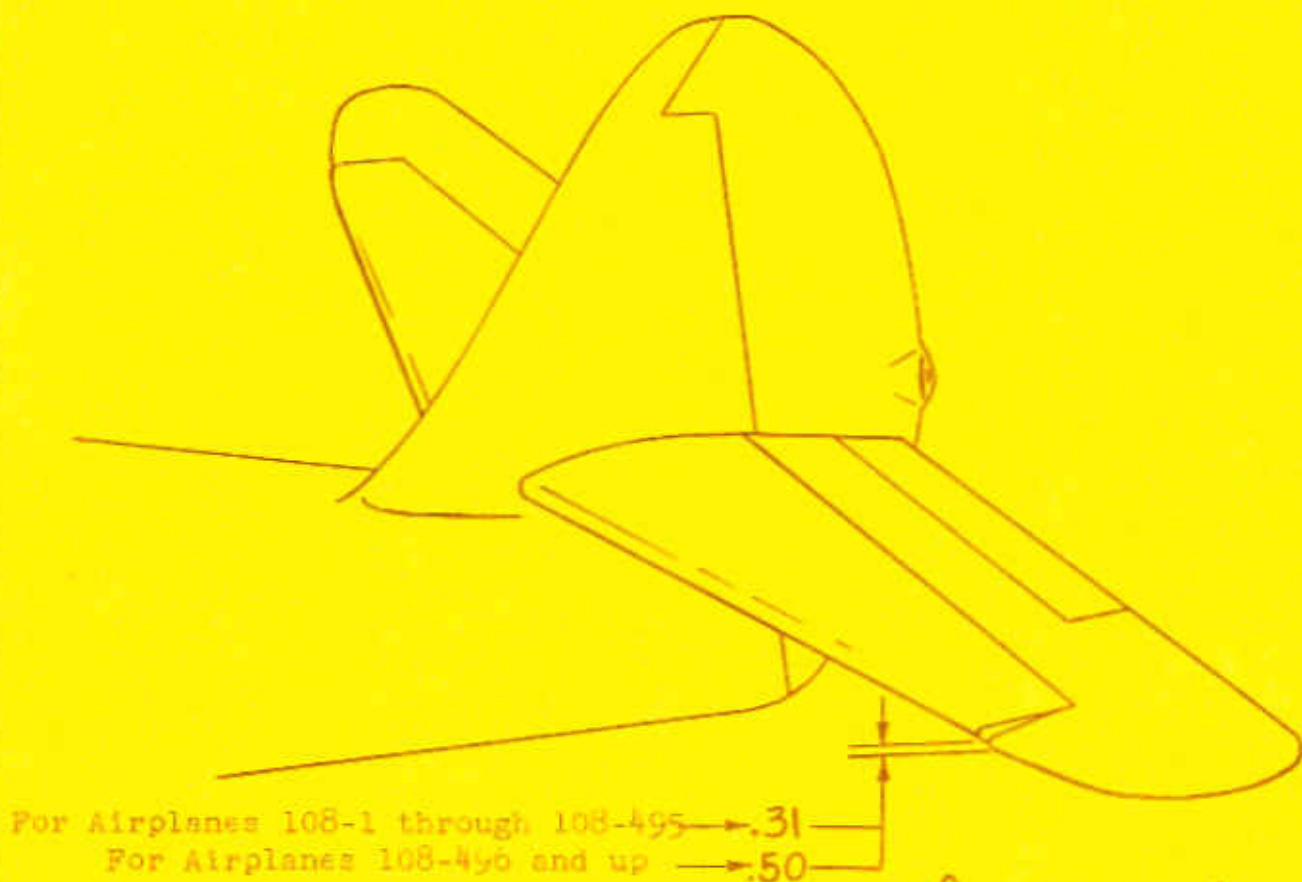

For Airplanes 108-1 through 108-495 → .31

For Airplanes 108-496 and up → .50

George Martin

George Martin
Part & Service Department